

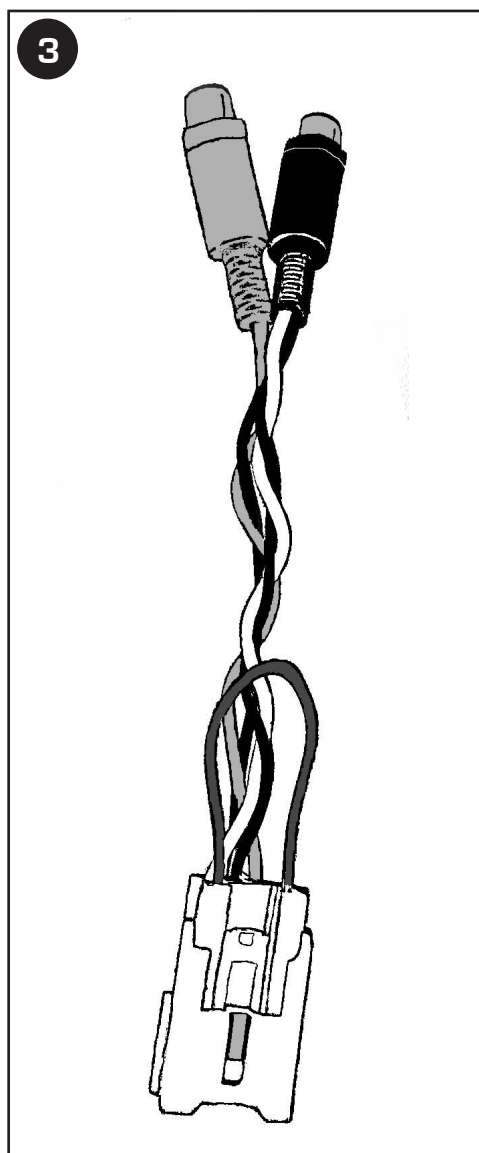


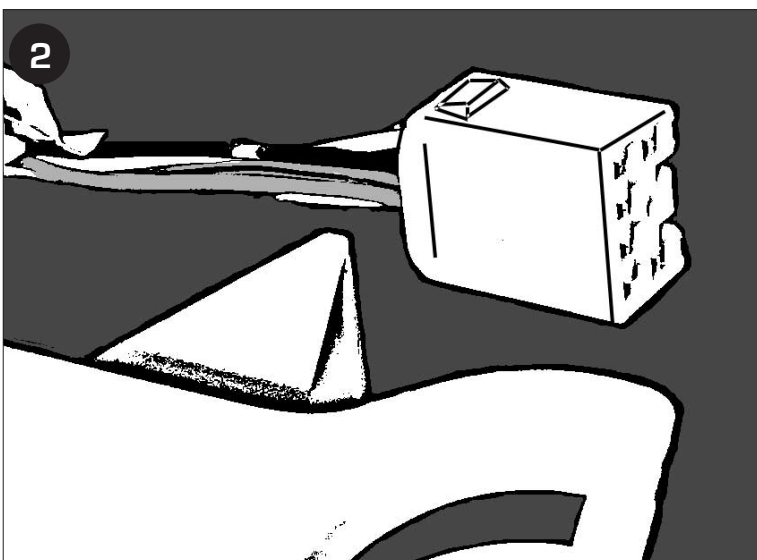

FORD BA AUXILIARY LEAD INSTALLATION INSTRUCTIONS

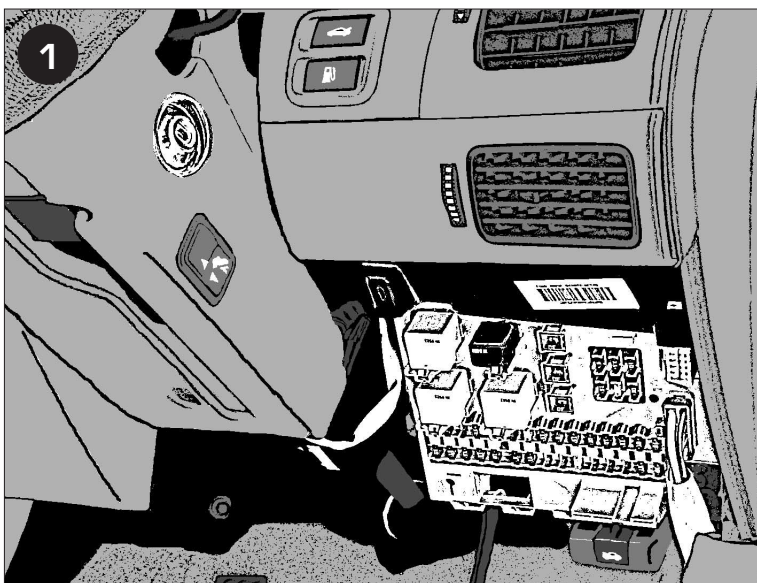

Installation Instructions:

1. The Ford BA Auxiliary Vehicle Harness plug is found behind the fuse panel. The fuse panel is located below and to the right of the steering wheel (fig 1).
2. To get to the Ford BA Auxiliary Vehicle Harness plug (fig 2), you'll need to lie on the floor under the steering wheel and reach up behind the fuse panel.
3. Connect the FORD BA AUXILIARY LEAD and the Ford BA Auxiliary Vehicle Harness plug.
4. Plug your audio input signals to the RCA connectors on the FORD BA AUXILIARY LEAD (fig 3). If more length is required, you may need to use an Auxiliary Extension cable.
5. Press the AM button on the head unit until the display shows AU to select the RCA AUX input from the FORD BA AUXILIARY LEAD.

12 MONTHS WARRANTY

For the period of 12 MONTHS from the date of purchase of your product, we undertake to replace or repair any part of the product which fails due to manufacturing defect within 12 months of the date of purchase provided that:

- a) You retain your receipt as proof of purchase.
- b) The product serial number is not removed or altered.
- c) The product has been installed and used only in accordance with the instructions supplied with the product.



FORD BA AUXILIARY LEAD

The FORD BA AUXILIARY LEAD is designed to be used for connecting an additional auxiliary input to the FORD BA's factory head unit via the existing vehicle harness plug.

Please read the installation instructions for more information.