



CONFIGURATION & INSTALLATION INSTRUCTIONS

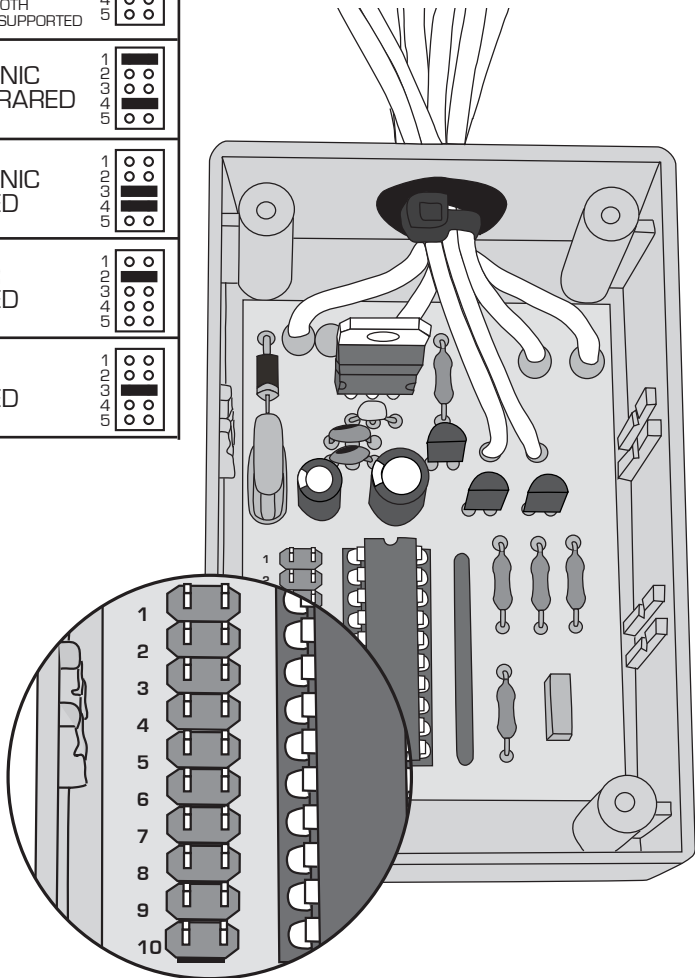
























IMPORTANT

If you are using the infrared connection, before proceeding with installation please ensure that your audio headunit is compatible and working with the remote control as stated below.

AFTERMARKET HEADUNIT BRANDS & COMPATIBLE REMOTE CONTROL EMULATIONS

BRAND	PART NO	BRAND	PART NO
ALPINE	RUE-4185 & RUE-4202	JVC	RM-RK50; DVD RM-RK230
BLAUPUNKT	RC-12H	KENWOOD	RC410 & RCDV100
CLARION	RCB130 & RCB161	PANASONIC	YEFX992663
ECLIPSE	RMC105 & 1802	PIONEER	CXC1265, CDSR80 & CXC2665
FUSION	Remote for CA-CD500	SONY	RMX115

STEP ONE: CONFIGURE THE CAT'S JUMPERS - BOTH HEADUNIT & VEHICLE SETTINGS


HEADUNIT CONFIGURATION: JUMPER SETTINGS			VEHICLE CONFIGURATION: JUMPER SETTINGS		
ALPINE INFRARED & DIRECT			KENWOOD INFRARED <small>NOTE: BLUETOOTH MODELS NOT SUPPORTED</small>		HOLDEN VR/VS <small>NOTE: JVC & KENWOOD NOT AVAILABLE</small>
BLAUPUNKT INFRARED		PANASONIC DVD INFRARED		HOLDEN VT/VX	
CLARION DIRECT		PANASONIC INFRARED		HOLDEN VY/VZ	
CLARION INFRARED		PIONEER INFRARED		HOLDEN XC BARINA, TS ASTRA \ VECTRA	
CLARION INFRARED FOR MAX386VD & VRX486VD MODELS ONLY		SONY INFRARED		HOLDEN TK BARINA, HOLDEN JF VIVA	
ECLIPSE INFRARED				FORD AU1	
ECLIPSE DIRECT FIT PCB (SUPPLIED)				FORD AU2/3	
FUSION INFRARED				FORD BA/ FORD TERRITORY	
JVC DVD INFRARED				MAZDA 3 or 6	
JVC INFRARED				MITSUBISHI 380	
KENWOOD DIRECT <small>NOTE: BLUETOOTH MODELS NOT SUPPORTED</small>					

STEP TWO: CONNECT WIRING TO CAR HARNESS

TO WIRE THE CAT POWER AND TRIGGER SIGNALS: Join the CAT10 Red to Accessories and Black to Ground. Where the Antenna Out switches (Non-RDS units) join the CAT10 Blue to the Antenna out. The lid screws are a Phillips Posidrive #1.

HOLDEN VR/VS	Connect CAT10 Brown to vehicle Brown. NOTE: Kenwood and JVC not supported for these vehicles.
HOLDEN VT/VX	Confirm the vehicle's Black/White trace is ground (factory). Connect CAT10 Brown to vehicle Brown. For Calais, Statesman, Caprice & Monaro V8, ground the vehicle Black/Yellow trace & connect CAT10 Brown to vehicle Brown.
HOLDEN VY/VZ	Ground the vehicles Black/Yellow trace and connect CAT10 Brown to vehicle Brown.
HOLDEN XC BARINA TS ASTRA/VECTRA	Connect CAT10 Brown to vehicle Blue/Red trace (same row and next to Acc Red on ISO plug).
HOLDEN TK BARINA HOLDEN JF VIVA	Connect CAT10 Brown to vehicle White/Blue trace and vehicle White/Red trace to ground.
FORD AU1	Connect CAT10 Brown to vehicle Red/White trace. The AU1 has no (S) on the Seek button.
FORD AU2/3	Connect CAT10 Brown to vehicle Red/Black trace and CAT10 Green to vehicle Orange/Black trace.
FORD BA, FORD TERRITORY	SPLICE the CAT10 Brown wire to the vehicle's Red/White trace as seen in the diagram right. DO NOT CUT THE RED/WHITE TRACE as this will stop the vehicle's overspeed function from working.
MAZDA 3/6	Connect CAT10 Brown to vehicle Brown/Yellow trace and vehicle White/Black trace to Ground.
MITSUBISHI 380	Connect CAT10 Brown to vehicle Green/Orange trace and vehicle Green/Black trace to Ground.

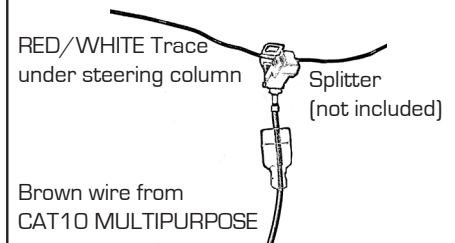
FOR FORD BA/TERRITORY ONLY



STEP THREE: INSTALL INFRARED OR CONNECT DIRECT

INFRARED INSTALL

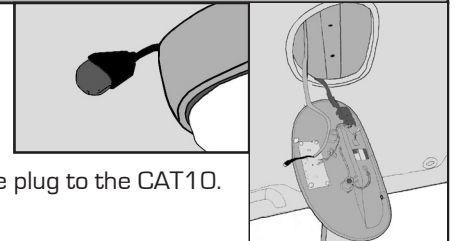It is recommended at this point to connect the infra-red plug to the CAT10 and point the LED directly at the headunit, confirming the steering wheel button commands prior to installing the cable. Once tested, install the cable and mount the LED making sure it points DIRECTLY to the headunit. The LED is commonly mounted from the interior light in the middle of the roof (see diagrams on right) or from the console. Finally connect the plug to the CAT10.



DIRECT CONNECT INSTALL

If your headunit has direct connect capabilities (except for Kenwood and Eclipse), simply plug the 3.5mm jack into the socket on the headunit.

KENWOOD	Cut the 3.5mm jack off and place a single male bullet connector to the grey only wire. Connect the Kenwood direct connect plug (Blue/Yellow Trace) to the CAT10.
ECLIPSE	Run the 2 trigger wires (Brown and Brown/Black Trace or White) from the radio harness into the CAT10 through the black grommit. Solder these two wires to the small Eclipse Direct PCB supplied and fit the PCB onto jumper positions 1 to 5.

12 MONTHS WARRANTY

For the period of 12 MONTHS from the date of purchase of your product, we undertake to replace or repair any part of the product which fails due to manufacturing defect within 12 months of the date of purchase provided that:

- a) You retain your receipt and this document as proof of purchase.
- b) The product serial number is not removed or altered.
- c) The product has been installed and used only in accordance with the instructions supplied with the product.

DEALER: _____ SERIAL NO: _____

DATE PURCHASED: ____ / ____ / ____ DATE RETURNED: ____ / ____ / ____

FAULT: _____